



Picture 1-2		<p>Starting point of the back of the gear rack to the rubber duster is 3,50 cm like in the picture</p>
Picture 3-4		<p>Make holes of 6mm onto the sliding door</p>
Picture 5-6		
Picture 7-8		



<p>Picture 9-10</p>		
<p>Picture 11-12</p>		
<p>Picture 13-14</p>		
<p>Picture 15-16</p>		



<p>Picture 17-18</p>		
<p>Picture 19-20</p>		
<p>Picture 21-22</p>		
<p>Picture 23-24</p>		



Picture
25-26



Picture
27-28



Picture
29-30





Picture
31-32






PLEASE CHECK THE FOLLOWING TRICKS BEFORE STARTING THE INSTALLATION!

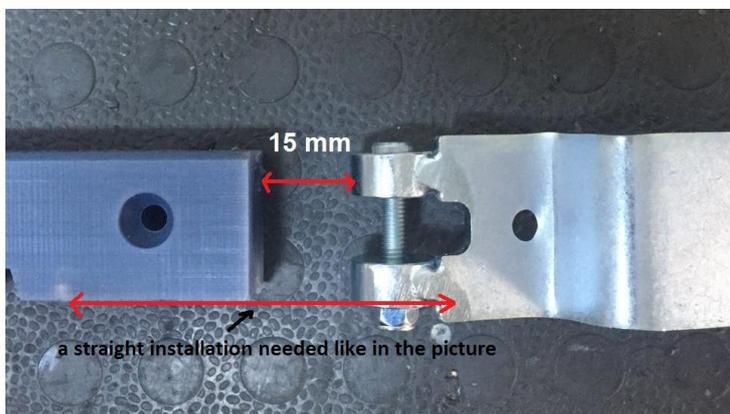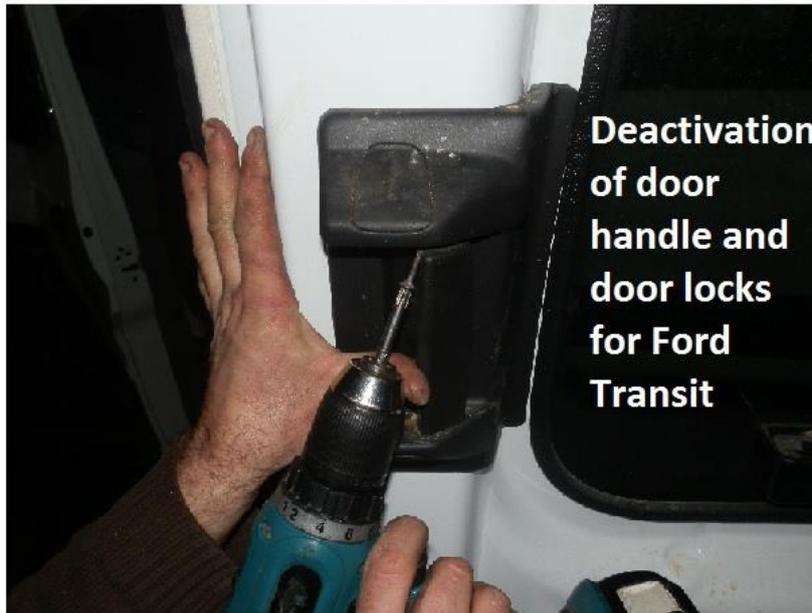


Small Spring goes to the front of the long gear rack to stop the mechanism softly together with the magnetic switch.

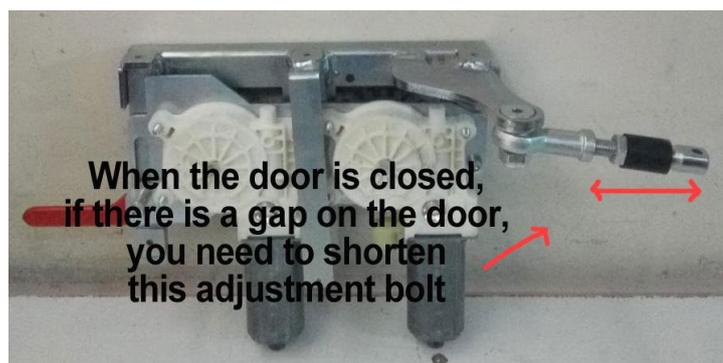



SIMPLE WIRING DIAGRAM

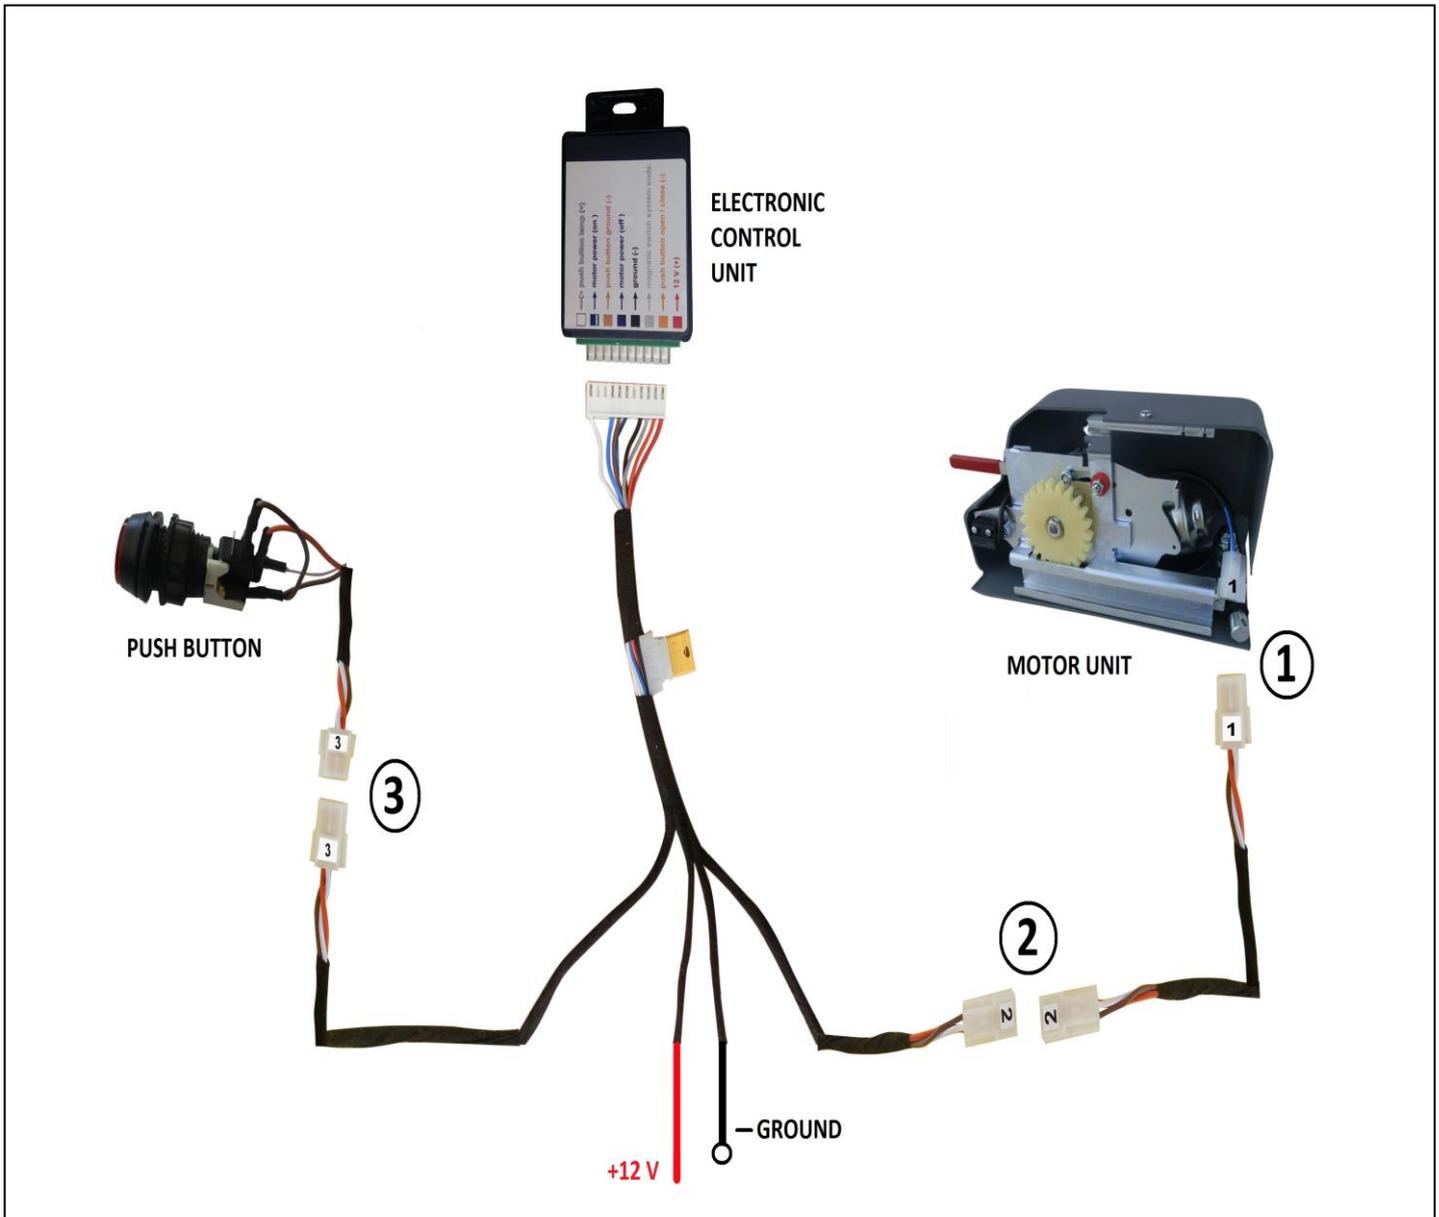



NECESSARY INSTALLATION TOOLS

